WT10J4230MB/YL
WT12J4200MR/YL

Manual Electric Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

contents

FEATURES 2
SAFETY INSTRUCTIONS 2
cautions 2
precautions when operating 3
DESCRIPTION OF PARTS 4
CONTROL PANEL 5
INSTALLATION 6
Environment 6
Connecting the inlet hose 6
CLEANING THE MACHINE. 6
Cleaning the lint filter 6
Cleaning the wash tub 6
WASHING PROCEDURE 6
Washing 6
Soaking. 7
Spinning dry 7
Heavy wash 7
Over flow wash 8
Spinning rinse 8
LAUNDRY GUIDE 8
MAINTENANCE 9
TROUBLESHOOTING. 9
SPECIFICATIONS 10

Instruction about the WEEE mark

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information on safe disposal and recycling visit our website www.samsung.com

features

- **Double Storm Pulsator**
  - By rotating an inner and outer blade at different speeds, two powerful currents of water created that ensure that clothes get clean with less damage than a conventional washing machine. The Double Storm like water currents enhance both washing and rinsing power while reducing unnecessary fractions and in creating both the durability and reliability of your fine fabrics by preventing the laundry from getting twisted and knotted.
- **Transparent Window**
  - This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation.
    While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

safety instructions

- Must follow the cautions and precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

cautions

- **Do not put your hands into the spin dryer basket when it is spinning.**

  Your fingers can be caught by spinning laundry and damaged.
  Do not touch clothes and spin-dry tub when spinning.If the spin-dry tub does not stop within 15 seconds after opening the cover, please stop using the machine and have it repaired.
- **Never allow children to operate or play with the washing machine.**

  Children playing with the washing machine may accidentally fall into the washing tub.
- **Do not climb up the Washing Machine or lid.**

- **Must follow the cautions below when the washing machine is working.**

  Do not fall the WASH-TRAY to the wash-tub when the washing running.

- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**
- **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- **To avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.**
- **For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.**
- **Do not use adapter or extension cord to supply power to your washing machine.**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure that they do not play with the appliance.**

⚠ precautions when operating

- **Don't use excessively hot water. (50°C or more)**

  Plastic parts may be deformed or damaged. Also, clothing may be deformed or decolored.

CAUTION Do not connect to the hot water supply.

- **Before washing,check all pockets.**

  If nails or pins remain in pockets, they may damage the washing machine or clothes.
- **Close the water tap a little if the water pressure is too high.**
- **To avoid water splashes, close the wash tub lid.**
- **Never splash water on the control panel.**
- Take out personal belongings from pockets.



CAUTION Check the pockets! Hairpins and coins cause damages to clothes and washing machine. They make noise and problems to the machine. Must check the pocket.

- **Put only washing cloths on WASH-TRAY.**
  Heavy cloths & thing not to be kept.

- **Don't put candle & Hot Things on washing machine.**

- **Be able to hang the WASH-TRAY on the side hook, while operating the Washing Machine or not.**

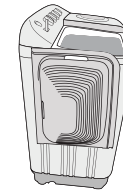

- **Be sure to cover with the inner cover on laundry before spinning.**

  This prevents laundry from being tossed out and damaged.

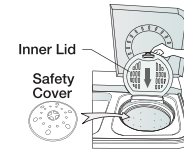

- **Be sure lay the drain hose(A) down.**

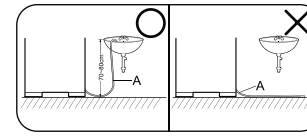

- **Heavy laundry or loads on WASH-TRAY may make it buckle and fall out of washing machine.**
  Do not overload WASH-TRAY
- **Don't pull off the Knobs. Knobs can't take off from outside of the Panel.**

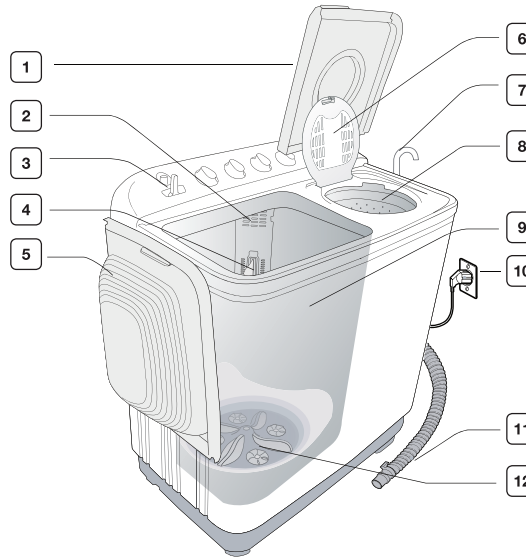

1	**SPIN DRYER LID** When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system.
2	**OVER FLOW FILTER**
3	**WATER SELECTOR**
4	**LINT FILTER** This is used for gathering the dregs which are made during washing.
5	**WASH TRAY** Be sure to keep the tray closed during washing and spinning.
6	**INNER LID**
7	**DRAIN HOSE** (WITH PUMP)
8	**SPIN DRYER BASKET**
9	**WASH TUB**
10	**POWER CORD** The plug's shape may not correspond with this drawing
11	**WATER DRAIN HOSE**
12	**PULSATOR**

WT10J4230MB/YL

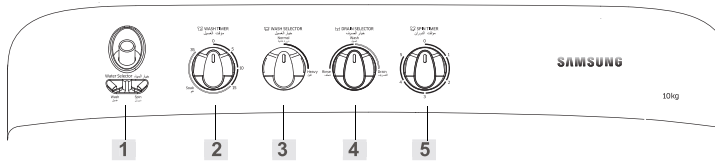

WT12J4200MR/YL

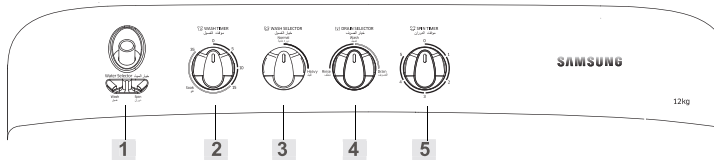

1	**WATER SELECTOR**	During washing,WATER SELECTOR KNOB should be selected to wash.During spin rinsing, WATER SELECTOR KNOB should be selected to spin.
2	**WASH TIMER**	This is used to set the wash time, 1-15 minutes and can close the “Soak” fuction by 1-20 minutes.
3	**WASH SELECTOR**	You can wash laundry effectively by various methods.
4	**DRAIN SELECTOR**	This is used to set the Wash/Rinse or Drain.
5	**SPIN TIMER**	This is used to set the spin time, 1-5 minutes.

installation

Environment

- **How to move the machine.**
  Wheels are provided for easy translocation of machine.
  - Hold the machine firmly as shown in the figure below.

Do not move machine when it is loaded.

- **Leave some space.**
  Space at last 15 cm between the washing machine and the wall.
- **Place the washing machine on a sturdy flat surface.**
  If the washing machine is placed on an uneven or weak surface, noise or vibration may be occurred. (Allowable is 2°)
- **Never install the washing machine near water.**
  Do not place the washing machine in steamy rooms or where the washing machine is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.
- **Avoid direct sunlight or heating devices.**
  As plastic and electrical components are affected by direct heat, never place the washing machine near heaters, boilers,etc. Do not place under direct sunlight.

Connecting the drain hose

Insert the drain hose(a) and push it tightly to be connected as arrow direction.



- Push it with force further to the bottom of the drain outlet
- Check the drain hose for not getting apart from the outlet by drawing it.

Connecting the inlet hose



(Insert the inlet hose into washing machine) **(Insert the inlet hose into faucet)**

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

cleaning the machine

Cleaning the lint filter

If the dregs are filled up in the lint filter after finishing the wash, push down(1) and pull it out(2) as shown in figure.
Remove the collected lint and rinse the filter net.

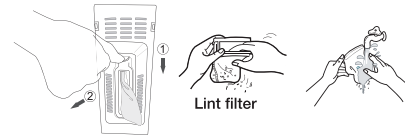

Cleaning the wash tub

Wipe off strains on the cabinet and operation panel with soft cloth.
Do not use benzene, thinners, cleanser, or wax, nor scrub the washing machine with a brush. Painted surfaces or plastic parts will be damaged.

washing procedure

Washing

1. Before starting washing, check the following;
   - Connect the water inlet hose and open the water tap.
   - Connect the power cord to the power supply outlet.
   - Lay the drain hose (A) toward a sinkhole.

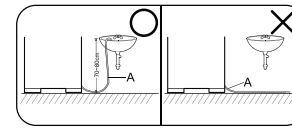

2. Set the NORMAL / HEAVY SELECTOR KNOB to the desired mode.

3. Set the WATER INLET SELECTOR.



4. Load laundry in the wash tub.

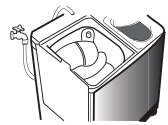

5. Fill water in the wash tub and add the detergent.

6. Set the WASH TIMER.

Set the Wash Timer 1-15 min. (option)

7. After washing,set the DRAIN SELECTOR KNOB to 'DRAIN' for draining.



Soaking

1. Place clothes into the WASH TUB.

2. Turn on tap or use bucket to fill the WASH TUB with desired amount of water.

3. Put detergent depending on the water volume and detergent package indications.

4. Set WASH TIMER to point between "15" to "35" in the timer.

- Soak-Washing automatically starts the wash (15 min.) after the soak (2 to 20 min.) is completed.
- The SOAK function (20 min.) repeats the cycle that is 1.5 ~ 2.0 min. turning and the next 5 min. resting 3 times.

Spinning dry

1. Transfer the clothes into the spin basket and arrange the clothes evenly.

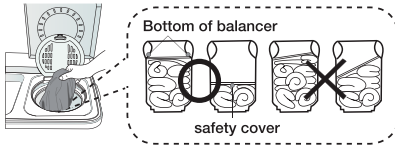

2. Be sure to attach the safety cover and close the inner lid.

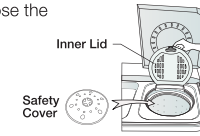

3. Close the spin dryer lid.



4. Set the SPIN DRYER TIMER 1-5 minutes.



5. Incomplete spining.(Severe vibration or unbalance) See "When you load ..."on page 9.

Heavy wash

1. Set the WASH SELECTOR KNOB to 'HEAVY'.

2. Supply the proper amount of water as not to overflow the top of the washing tub.

3. Set the WASH TIMER 10~15 minutes.

4. Drain the water. Set the DRAIN SELECTOR KNOB to 'DRAIN'.



5. Repeat this cycle until drain water is clean. (2~3 cycles)

6. Be sure lay the drain hose down.

Over flow wash

1. Keep suppling water.

Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.



2. Set the WASH TIMER 6~8 minutes.



3. As soon as the WASH TIMER shuts off, turn off the water tap.



4. Set the DRAIN SELECTOR KNOB to 'DRAIN'.



Spinning rinse

After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)

1. Load the laundry evenly into the spin basket.

2. Connect the water inlet pipe.
set the water selector to the right side.
And set the time of spinning as per your favor.

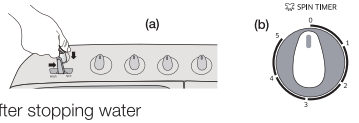

3. After stopping water supply, cover the laundry with safety cover and close the inner lid.

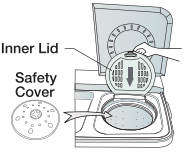

4. Close the spin dryer lid.

5. Set the SPIN DRY TIMER 2~3 minutes.



laundry guide

Washing time

Kinds of clothing	Washing time	Washing Selection
Extremely soiled heavy fabric	10 to 35 minutes (soak 20)	HEAVY
Linen,cotton,etc.	8 to10 minutes	
Ordinary clothes (underwear,etc)	7 minutes	NORMAL
Slightly soiled synthetic fiber	2 to 5 minutes	
100% wool,mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2 to 5 minutes	

Detergent

Amount of detergent	Water level
40 g	Low (42 ℓ)
50 g	Med (65 ℓ)
61 g	High (87 ℓ)

The amount of detergent is average.
Follow the instruction detergent printed on the package for amount of detergent.
Choose the amount of detergent depending on the fabric type.

Spin dry time

Type of laundry	Time
Thin (synthetic fiber)	1 min.
Wool	1~2 min.
Cotton	3~5 min.
Thick (cotton)	5 min.

WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.

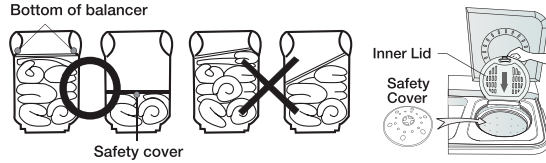

troubleshooting

TROUBLE	CHECK POINT
The washing machine does not work.	Check that the power supply is in good condition. Check that the power plug is inserted properly. Check that the wash timer knob or the spin timer knob is not in the "0" position.
The drain hose does not work.	Check that the drain hose is not laid too high. Check that the drain hose is not frozen.
There is abnormal noise during washing.	Check that there are no coins or any other foreign objects dropped into the wash tub.that the drain hose is not blocked by foreign matter.
There is abnormal noise and violent vibration during spinning.	Check that the washing machine is placed on flat, stable floor. Check that clothes are evenly distributed in the spin tub. Check that there are no washing materials or foaming debris dropped into the outside of the spin tub.

specifications

	MODEL	WASH	SPIN
CAPACITY	WT10J4230MB/YL WT12J4200MR/YL	10.0kg 12.0kg	7.0 kg
DIMENSIONS (WxDxH)mm	WT10J4230MB/YL WT12J4200MR/YL	W931xD553xH1052mm	
WEIGHT	WT10J4230MB/YL WT12J4200MR/YL	31.5 kg	
RATED VOLTAGE/FREQUENCY	WT10J4230MB/YL WT12J4200MR/YL	230V~/60Hz	
RATED POWER INPUT	675W		
WASHING POWER	450W		
DRYING SPIN POWER	180W		
PUMP POWER	45W		
WATER PRESSURE	0.1~0.6 MPa		
STANDARD QUANTITY OF WATER	Low : 42L Middle : 65L High : 87L		
RATING TIME	Washing 35minutes (Soak 20) / Spinning 5minutes		

memo

QUESTIONS OR COMMENTS?

Country	Contact Center	Web Site
RUSSIA	8-800-555-55-55	www.samsung.com/ru/support
AUSTRALIA	1300 362 603	www.samsung.com/au/support
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free	www.samsung.com/in/support
MALAYSIA	1800-88-9999 603-77137477(Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline amd Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
VIETNAM	1 800 588 889	www.samsung.com/vn/support
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/support
IRAN	021-8255	www.samsung.com/iran/support
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
KUWAIT	183-CALL (183-2255)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)
MOROCCO	080 100 22 55	www.samsung.com/n_africa/support
MEXICO	01-800-726-7864 (SAMSUNG)	www.samsung.com/mx/support
CHILE	800-726-7864 (Desde Celulares 02-4828200)	www.samsung.com/cl/support
PANAMA	800-7267 800-0101	www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)
ECUADOR	1-800-10-7267 1-800-SAMSUNG (72-6786)	www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)
PERU	0800-777-08	www.samsung.com/pe/support
COSTARICA	0-800-507-7267 00-800-1-SAMSUNG (726-7864)	www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
GHANA	0800-10077 0302-200077	www.samsung.com/africa_en/support

MADE IN CHINA

This product is RoHS compliant.

WT10J4230MB/YL
WT12J4200MR/YL

ألة الغسيل

دليل المستخدم

تخيل الأحتمالات

نشكرك على شراء هذا المنتج من سامسونج

SAMSUNG

الميزات

- **محرك دوران مزدوج (اختياري).**
  - بدوران الشفرة الداخلية والخارجية بسرعات مختلفة، يتم انشاء تيارين مائيين التي تم إنشاؤها اللذان يضمنان الحصول ملابس نظيفة دون ضرر أقل مقارنته مع الغسالة التقليدية. محرك الدوران المزدوج مثل التيارات المائية يعزز قوة كل الغسيل والشطف ويقلص من حدة الاضرار غير الضرورية ويخلق متانة وموثوقية للأقمشة ويجعلها ناصعة ويمنع من التوائها وتعقدها.
- **نافذة شفافة (اختياري)**
  - النافذة الشفافة هو مفهوم جديد لحل فضول المستخدمين لرؤية داخل الغسالة أثناء التشغيل.

    اثناء العمل، وتقدم عملية الغسيل داخل الغسالة ويمكن التحقق من العمل من خلال النظر الى النافذة الشفافة.

تعليمات السلامة

- يجب اتباع التحذيرات والاحتياطات اللازمة للسلامة لمنع الاخطار التي لا يمكن التنبؤ بها والاضرار عن طريق الاستخدام السليم والأمان.

تنبيهات

- لا تضع يديك في سلة وضع الملابس اثناء هو الدوران. يمكن صيد أصابعك بواسطة شفرات الدوران اثناء الغسيل او التجفيف.

لا تلمس الملابس ولا حوض الدوران اثناء تشغيل الدوران للتجفيف.
إذا لم يتوقف حوض الدوان في غضون 15 ثانية بعد فتح الغطاء، الرجاء ايقاف الجهاز،
وقم بعمل الصيانة او الفحص اللازم.
مصدر تيار مضخة التصريف.

- لم تسمح للأطفال بالعمل أو اللعب مع الغسالة. الأطفال الذين يلعبون مع الغسالة قد يقعون بطريق الخطأ في حوض الغسيل.

- لا تصعد على غسالة أو غطائها.

الفهرس

المواصفات 2
تعليمات السلامة 2
تنبيه 2
احتياطات عند التشغيل 3
شرح الأجزاء 4
لوحة التحكم 5
تنظيف الجهاز 6
التركيب 6
تنظيف جيوب الغسالة 6
تنظيف حوض الغسيل 6
إجراءات التنظيف 6
بيئة 6
توصيل خرطوم التصريف 6
الغسل 6
الغسيل الثقيل 7
النقع 7
عملية التجفيف 7
دليل الغسيل 8
الغسل بالماء الزائد 8
مغزل الشطف 8
الصيانة 9
اكتشاف الأخطاء واصلاحها 9
الميزات 10

تعليمات حول علامة نفايات المعدات الكهربائية (WEEE) يرجى التخلص الصحيح من هذا المنتج (النفايات معدات كهربائية وإلكترونية)

هذه العلامة على المنتج ومرفقاته او على الدليل تشير إلى أن المنتج وملحقاته الالكترونية لا ينبغي التخلص منها مع النفايات المنزلية الأخرى في نهاية فترة عملها. لتمنع أي ضرر بالبيئة أو بصحة الإنسان ناتج عن التخلص غير المسئول من النفايات، يرجى فصل هذه العناصر عن أنواع النفايات الأخرى، كما ينبغي إعادة تدويرها بطريقة مسؤولة لتعزز اعادة استخدامها بشكل مناسب.

لمزيد من المعلومات حول التخلص الآمن وإعادة تدوير المنتجات الإلكترونية والكهربائية يرجى زيارة موقعنا على الانترنت www.samsung.com أو

- ضع الملابس فقط صينية وضع الملابس الخاصة للغسيل. الملابس الثقيلة والاشياء الاخرى يجب ابعادها.

- لا تضع الشموع والاشياء الساخنة على الغسالة.

- كن قادر على تعليق صينية الغسل على جانب الخطاف، اثناء تشغيل غسالة او عدم تشغيلها.

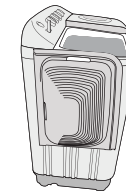

- تأكد تغطية الغسالة بالغطاء الداخلي اثناء الغسيل قبل دوران محرك الغسالة. هذا يمنع قذف الملابس خارجا وتلفها.

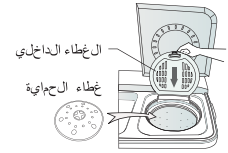

- تأكد من ان وضع خرطوم شفط الماء (A) نحو الأسفل.

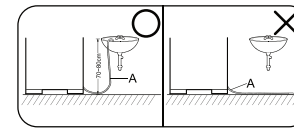

- الملابس الثقيلة أو الأحمال الثقيلة صينية الغسيل قد يجعلها تهتز وتسقط الغسالة. لا تزيد من كمية الماء في حوض الغسيل.
- لا تسحب مفاتيح التشغيل. المفاتيح لا يمكن ازالتها من على لوحة التحكم.

- يجب اتباع التحذيرات أدناه عندما تعمل الغسالة. لا تسقط صينية الغسيل في الحوض عند التشغيل.

- افصل سلك الطاقة من مصدر الطاقة عندما لا تكون قيد الاستعمال.
- يجب عدم إعاقة فتحات التهوية بواسطة السجاد عند تثبيت الغسالة على أرضية مغطاة بالسجاد.
- في حالة تلف سلك الإمدادات، يجب أن استبداله من قبل الشركة المصنعة، او وكيل خدماتها أو الأشخاص المؤهلين من أجل تجنب المخاطر.
- لتجنب التسرب والأضرار يجب ملء هذا الجهاز مع مشغل المرفق باستخدام ضغط المياه المعتدل فقط.
- لآلات الغسيل ذات فتحات التهوية في القاعدة، يجب منع السجاد كي يعيق الفتحات.
- لا تستخدم محول أو وصلة تمديد لسلك التيار لتوفير الطاقة لآلة الغسيل.
- لا يجب استخدام الجهاز من قبل أشخاص (بمن فيهم الأطفال) إذا كانت قدراتهم الجسدية والحسية والعقلية غير عالية، أو عدم وجود الخبرة والمعرفة، إلا إذا حصلوا على إشراف أو تعليمات بخصوص استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
- وينبغي أن يكون الاطفال تحت إشراف للتأكد من أنها لا تلعب مع الجهاز.

احتياطات عند التشغيل

- لا تستخدم الماء الساخن بشكل مفرط. (50 درجة مئوية أو أكثر) الامر الذي يسبب تلف القطع البلاستيكية. أيضا، قد يحدث اهتراء في الملابس أو تغير لونها. لا تقم بتوصيل إمدادات المياه الساخنة.

تنبيهات

- قبل الغسيل، افحص جميع الجيوب. إذا بقيت المسامير أو الدبابيس في الجيوب، فإنها قد تؤدي إلى تلف الغسالة أو الملابس.
- اغلق صنبور الماء قليلا إذا كان ضغط المياه عالية جدا.
- لتجنب رذاذ الماء، أغلق غطاء حوض الغسيل.
- لا ترش الماء على لوحة التحكم.
- إخراج ممتلكاتك الشخصية من الجيوب.

تنبيهات

افحص الجيوب! دبابيس الشعر والنقود تسبب أضرار للملابس والغسالة. وتسبب ضوضاء ومشاكل في الجهاز. يجب فحص جيوب الملابس جيدا.

شرح الأجزاء

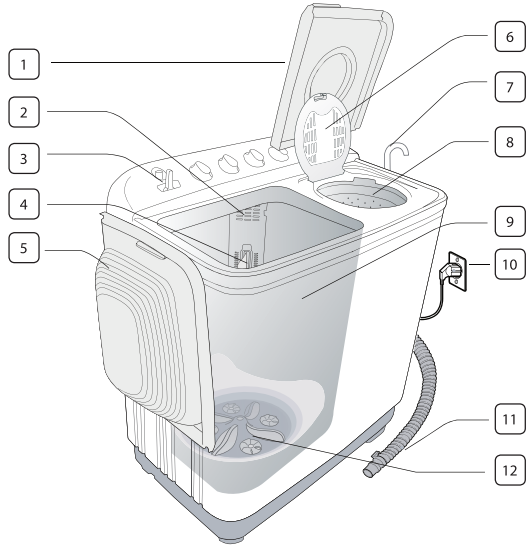

1	**غطاء معزل التجفيف** عندفتحالغطاءحينمايدور حوض الغسالة،سيتمإيقافالدورانمنقبلنظامالفرامل.
2	**مرشح الماء الزائد**
3	**محدد الغسالة**
4	**جيوب الغسالة** تستخدمهذهلجمعالاوساخالتيتنتج أثناءالغسيل.
5	**صينية الغسل** اترك صينية الغسل مغلقة اثناء الغسل او التجفيف.
6	**الغطاء الداخلي**
7	**خروم التفريغ** (مزود بمضخة)
8	**سلة معزل التجفيف**
9	**حوض الغسل**
10	**سلك التيار** الموصل في الشكل قد لا يتطابق مع الموصل الفعلي.
11	**خرطوم شفط الغسل**
12	**محرك الدوران**

WT10J4230MB/YL

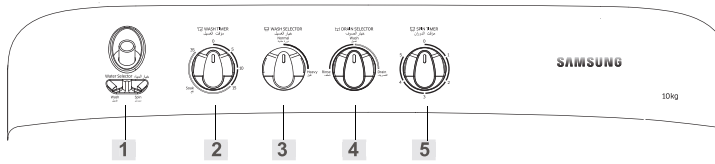

WT12J4200MR/YL

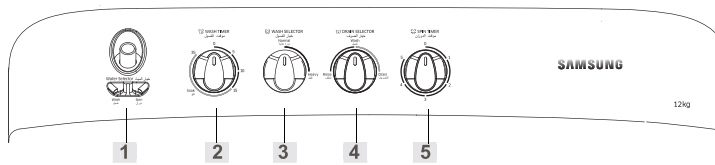

1	محدد الماء	أثناء الغسيل ينبغي اختيار مفتاح تحديد الماء للغسل. أثناء الشطف، ينبغي اختيار مفتاح تحديد الماء لزيادة ونقصان المياه.
2	مؤقت الغسل	يستخدم هذا لضبط وقت الغسل، 1-15 دقيقة، ويمكن إغلاق وظيفة "النقع" بنسبة 1-20 دقيقة.
3	محدد الغسل	يمكنك غسل الغسيل بشكل فعال عن طريق وسائل مختلفة.
4	محدد التجفيف	يستخدم هذا لتعيين غسل / شطف أو تجفيف
5	مؤقت المغزل	ويستخدم هذا لضبط وقت الدوان، 1-5 دقيقه.

تنظيف الجهاز

تنظيف جيوب الغسالة

إذا علقت الاوساخ في مرشح الوبر بعد الانتهاء من الغسل، ادفع إلى الاسفل (1) لإخراجها (2) كما هو مبين في الشكل.

إزال الوبر واشطف مرشح التصفية.

تنظيف حوض الغسيل

امسح الاوساخ من لوحة التحكم باستخدام قطعة قماش ناعمة.

لا تستخدم البنزين، المخففات، المطهر، أو الشمع، ولا تفرك الغسالة بفرشاة. سوف تتضرر الأسطح المطلية أو قطع البلاستيك.

إجراءات التنظيف

الغسل

1. قبل بدء الغسيل، افحص مما يلي؛
   - وصل خرطوم مدخل المياه وصنبور الماء.
   - قم بتوصيل سلك الطاقة إلى منفذ امدادات الطاقة.
   - وضع خرطوم التصريف (A) الى الاسفل نحو المجرى.

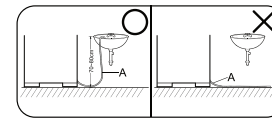

2. قم بتعيين محدد الغسالة طبيعي / تقيل إلى الوضع المطلوب.

التركيب

بيئة

- كيفية نقل الجهاز. يتم توفير عجلات لنقل الجهاز بسهولة.
  - امسك الجهاز بقوة كما هو مبين في الشكل أدناه.

لا تتحرك الجهاز عند تحميله.

- اترك بعض المساحة. المساحة يجب ان تكون في 15 سم بين الغسالة والجدار.
- ضع الغسالة على سطح مستو قوي. إذا تم وضع الغسالة على سطح مهتز أو ضعيف، ضجيج أو اهتزاز قد يحدث. (المسموح به 2 درجة)
- لا تثبيت الغسالة بالقرب من المياه. لا تضع الغسالة في غرفه ملية بالدخان أو حيث تتعرض الغسالة مباشرة للمطر. الرطوبة قد تدمر العزل الكهربائي وتسبب خطر الصدمة الكهربائية.
- تجنب وضعها بالقرب من أشعة الشمس المباشرة أو أجهزة التدفئة. قد تتأثر مكوناتها البلاستيكية والكهربائية بواسطة الحرارة المباشرة، لا تضع الغسالة بالقرب السخانات، الغلايات، إلخ. لا تضعها تحت أشعة الشمس المباشرة.

توصيل خرطوم التصريف

إدراج خرطوم التصريف (a) وادفعه بقوة ليصبح متصلا كما اتجاه السهم .



- ادفعه بقوه الى الأسفل نحو منفذ التصريف.
- تأكد من خرطوم التصريف بحيث لا يذهب بعيدا عن المنفذ.

توصيل مدخل الخرطوم



(أدخل مدخل خرطوم إلى صنبور) (أدخل مدخل الخرطوم في الغسالة)

مجموعات خراطيم جديدة متوفرة مع الجهاز لاستخدامها وإعادة استخدامها لا ينبغي استخدام مجموعات خراطيم قديمة.

2. تأكد من تركيب غطاء الحماية واغلق الغطاء الداخلي.

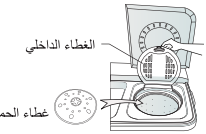

3. اغلق غطاء معزل التجفيف.

4. قم بتعيين مؤقت مغزل التجفيف 1-15 دقيقة.

5. إذا لم يتم الغزل والتجفيف. (الاهتزاز الشديد أو عدم الاتزان) انظر "عند التجهيل..." في الصفحة 9.

الغسيل الثقيل

1. قم بتعيين مفتاح محدد طبيعي"ثقيل"

2. قم بتوفير كمية مناسبة من الماء حتى لا تجاوز الجزء العلوي من حوض الغسيل
3. قم بتعيين مؤقت الغسل 1-15 دقيقة



4. بعد عملية الغسل، قم بتعيين مفتاح محدد التصريف الى "تصريف" لأجراء عملية التجفيف.

5. قم بتكرار هذه العملية حتى يصبح الماء نظيفا (2 الى 3 مرات).
6. تأكد من تركيب خرطوم التصريف.

3. قم بتعيين محدد الماء.

4. قم بوضع الملابس في حوض الغسل

5. أملى حوض الغسل بالماء.

6. حدد مؤقت الغسل.

قم بتعيين مؤقت الغسل 1-15 دقيقة (اختياري)

7. بعد عملية الغسل، قم بتعيين مفتاح محدد التصريف الى "تصريف" لأجراء عملية التجفيف.



النقع

1. وضع الملابس في حوض المياه الغسيل.
2. أدر الصنبور أو استخدام الدلو لملء المياه في الحوض بالكمية المطلوبة من المياه.
3. ضع المنظفات اعتمادا على حجم المياه ومؤشرات حزمة المنظفات.
4. اضبط مؤقت الغسالة الى نقطة بين 35 و15 دقيقة.
   - نقع الغسيل تلقائيا يبدأ العمل (15 دقيقة) بعد النقع (2-20 دقيقة) تنتهي عملية النقع.
   - وظيفة النقع (20 دقيقة) تتكرر دوريا 1.5 الى 2.0 دقيقة. تعمل 5 دقائق، لـ 3 مرات.

عملية التجفيف

1. انقل الملابس الى سلة التجفيف وقم بترتيب الملابس بشكل متساو.

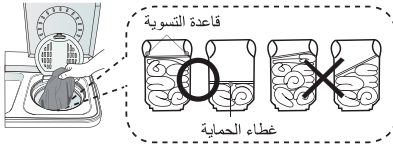

4. إغلاق غطاء مغزل التجفيف.

5. قم بتعيين مؤقت التجفيف 2-3 دقيقة



دليل الغسيل

زمن الغسل

نوع الملابس	زمن الغسيل	نوع الغسل
الأقمشة الثقيلة المتسخة للغاية	10 إلى 35 دقائق (نقع 20)	ثقيل
الكتان، القطن، وغيرها	8 إلى 10 دقائق	
الملابس العادية (الملابس الداخلية، الخ)	7دقائق	دورة أساسية
الألياف الاصطناعية المتسخة قليلا	2-5دقائق	
100٪ من الصوف، حياكة الصوف مختلطة، الألياف الاصطناعية رقيقة مع علامات غسل اليدين.	2-5دقائق	

المنظفات

كمية المنظفات	مستوى الماء
42 غرام	منخفضة (40 لتر)
65 غرام	ميد (50 لتر)
87 غرام	عالية (61 لتر)

كمية المنظفات متوسطه. اتبع تعليمات المنظفات المطبوعة على حزمة المنظفات. اختيار كمية المنظفات تبعا لنوع النسيج.

زمن مغزل التجفيف

نوع الغسيل	الزمن
رفيع (الألياف الصناعية)	1دقيقة .
صوف	1 ~ 2دقيقة.
قطن	3 ~ 5دقائق .
سميك (القطن)	5دقائق.

الغسل بالماء الزائد

1. استمر في امداد الماء.

قم بضبط ضغط المياه لضمان أن كمية المياه المزودة لا تتجاوز أن تصريف المياه.



2. قم بتعيين مؤقت الغسل 6-8 دقيقة

3. طالما وان مؤقت الغسل مغلقا، اغلق صنبور الماء.





4. قم بتعيين مفتاح محدد التصريف الى "تصريف" لأجراء عملية التجفيف.



مغزل الشطف

بعد الشطف يمكنك اختيار هذه الدورة لشطف أكثر فعالية (بالطبع، لا تقم بتحديد هذا لشطف فقط.)

1. تحميل الغسيل بالتساوي في سلة تدور.

2. قم بتوصيل انبوب مدخل المياه. ثم قم بتعيين محدد المياه إلى الجانب الأيمن. وضبط الوقت الغزل حسب طلبك.



3. بعد وقف إمدادات المياه، قم بتغطية الغسالة بغطاء الحماية قم اغلق الغطاء الداخلي.

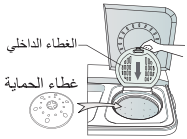

الصيانة

عند تحميل الغسيل في سلة الغزل.

اضغط على الغسيل بالتساوي ثم ضع غطاء الحماية على سلة الأسطوانة الغزل كما هو مبين في الشكل.

اكتشاف الأخطاء واصلاحها

المشكلة	افحص ما
الغسالة لا تعمل	تأكد من أن التيار الكهرباني في حالة جيدة. تأكد من إدخال قابس الطاقة بشكل صحيح. تأكد من أن مفتاح الموقت الغسل او الموقت الغزل ليسا على الموضع "0".
خرطوم التصريف لا يعمل.	تأكد من أن خرطوم التصريف ليس موضوع عالي. تأكد من أن خرطوم التصريف غير مجمدة .
هناك ضجيج غير طبيعي أثناء الغسل.	تأكد من عدم وجود نقود أو او أي أجسام غريبة أخرى في حوض الغسيل. أن خرطوم التصريف قد يتسدد.
هناك ضجيج غير طبيعي واهتزاز عنيف أثناء الغزل.	تأكد من وضع الغسالة على سطح مستوء ومستقر. تأكد من توزيع الملابس بالتساوي في الحوض. تأكد من عدم تسرب مواد غسيل أو رغوة خارج الحوض.

	الموديل	الغسل	المغزل
السعة	WT10J4230MB/YL WT12J4200MR/YL	10.0 كجم 12.0 كجم	7.0 كجم
الابعاد (عرض* عمق* ارتفاع) ملم	WT10J4230MB/YL WT12J4200MR/YL	W931xD553xH1052 ملم	
الوزن	WT10J4230MB/YL WT12J4200MR/YL	31.5 كجم	
الجهد المقدر/التردد الثابت (هرتز)	WT10J4230MB/YL WT12J4200MR/YL	230V~/60Hz	
مدخل الطاقة	675W		
الغسل	450W		
العصر با لدوراز	180W		
مصدر تيار مضخة التصريف	45W		
ضغط الماء	0.1~0.6 ميجا باسكال		
جودة الماء القياسية	منخفض: 40 لتر، متوسط: 50 لتر، مرتفع: 61 لتر		
معدل الوقت	التغسيل 35 دقيقه (النقع 20) / العزل والتجفيف 5 دقائق		

أي أسئلة أو تعليقات؟

Web Site	Contact Center	Country
www.samsung.com/ru/support	8-800-555-55-55	RUSSIA
www.samsung.com/au/support	1300 362 603	AUSTRALIA
www.samsung.com/in/support	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free	INDIA
www.samsung.com/my/support	1800-88-9999 603-77137477(Overseas contact)	MALAYSIA
www.samsung.com/ph/support	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline amd Mobile] 02-4222111 [Other landline]	PHILIPPINES
www.samsung.com/sg/support	1800-SAMSUNG(726-7864)	SINGAPORE
www.samsung.com/vn/support	1 800 588 889	VIETNAM
www.samsung.com/support	0860-SAMSUNG(726-7864)	SOUTH AFRICA
www.samsung.com/iran/support	021-8255	IRAN
www.samsung.com/pk/support	0800-Samsung (72678)	PAKISTAN
www.samsung.com/n_africa/support	80-1000-12	TUNISIA
www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)	183-CALL (183-2255)	KUWAIT
www.samsung.com/Levant/support (English)	0800-22273 06 5777444	JORDAN
www.samsung.com/n_africa/support	080 100 22 55	MOROCCO
www.samsung.com/mx/support	01-800-726-7864 (SAMSUNG)	MEXICO
www.samsung.com/cl/support	800-726-7864 (Desde Celulares 02-4828200)	CHILE
www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)	800-7267 800-0101	PANAMA
www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)	1-800-10-7267 1-800-SAMSUNG (72-6786)	ECUADOR
www.samsung.com/pe/support	0800-777-08	PERU
www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)	0-800-507-7267 00-800-1-SAMSUNG (726-7864)	COSTARICA
www.samsung.com/africa_en/support	0800-726-7864	NIGERIA
www.samsung.com/africa_en/support	0800-10077 0302-200077	GHANA

صنع في الصين

هذا المنتج متوافق مع معيار RoHS